

User Manual



80000mAh AC Power Bank

Thank you for purchasing this product.
Please carefully read the instruction before use.

Instructions for Use

What to power from AC power bank

- AC: Laptops, TVs, Printers, CPAPs, Quadcopter drones, Fans, Lamps, Car Pumps, Toast Makers, Coffee Machines, Mini Fridges, Display Monitors, Small Appliances and other AC plug devices that require less than 130W.
- USB: Smart Phones, MP3 Players, Game Players, Digital Cameras, E-Readers, Tablets, etc.
- TYPE-C: Laptop, Nintendo Switch, 12-inch MacBook, etc.
- Get pass-through charging manually. When the power bank is being charged, the display shows 19V. Long press the power button to turn on the power bank and the display will show OUT. And it's ready to charge.



CPAP



Quadcopter drone



Fan



Mini refrigerator



LED light



Smartphone



Laptop

 


TV

and more...


Instructions for Use

How to use AC power bank

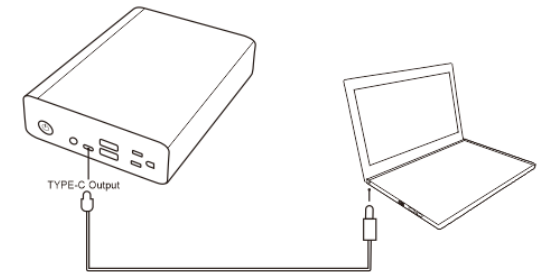

1. Charging from TYPE-C port

 
Connect your TYPE-C device to the TYPE-C port directly and it will start charging.

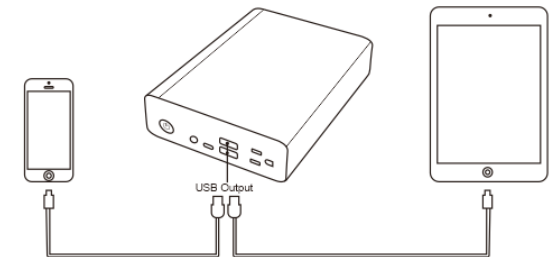

2. Charge from USB Ports

- Long press the power button to turn on the power bank, the digital screen will light up.
- Connect your USB devices to the USB port via USB cable.
- It will output appropriate voltage (5V/9V/12V) automatically for your devices. (Note: It can Quick Charge for QC compatible devices.)
- The power bank will automatically turn off after one minute or long press the power button to turn off the power bank after using.

 
Instructions for Use

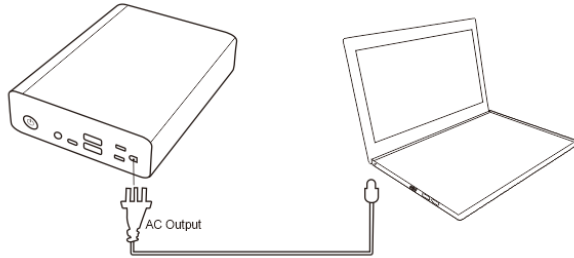

3. Charge from AC Outlet

- Long press the power button to turn on the power bank, the digital screen will light up.
- Plug your adapter to the AC socket and it can start power your devices.
- The power bank will automatically turn off after one minute or long press the power button to turn off the power bank after using.

 
4. All output ports can charge several devices like laptop, tablet, cell phone simultaneously.

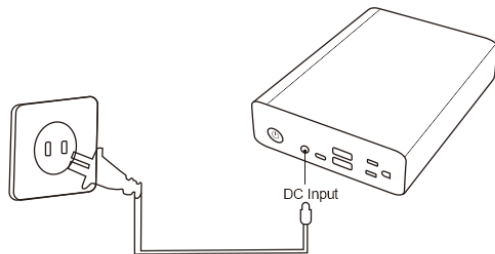

5. To charge the AC Power bank

Connect the charger with the DC-IN port, the other side connects to wall socket. The digital screen showing 100% means it is full charged.

 Instructions for Use

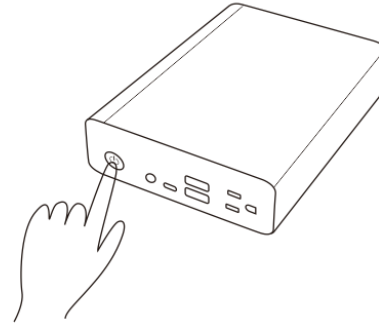

6. Battery level indicator

Long press the power button, the screen will light up to show the battery level. If the digital screen does not light up, it means the power bank needs to be charged.

Specifications

Capacity: 80000mAh

Battery type: li-polymer battery

DC Input: 19V/4.3A

TYPE-C Input: 5V/9V/12V/15V 3A; 20V 3.25A-PD 65W (max)

TYPE-C Output: 5V/9V/12V/15V 3A; 20V 5A-PD 100W (max)

Quick Charge 3.0 USB 1: 5V/9V/12V 3A (max)

Quick Charge 3.0 USB 2: 5V/9V/12V 3A (max)

AC Output: 110V/60HZ/130W (max)

220V/50HZ/130W(max)

Package Contents

- 1* AC Power Bank
- 1* Multifunction Bag
- 1* Conversion Plug
- 1* Type-c to Type-c Cable
- 1* Charger
- 1* USB to Type-c Cable
- 1* User Manual

Safety instructions

Please observe these instructions to ensure safe usage.

- Do NOT disassemble, repair or modify the unit or the battery.
- Do NOT touch the unit or the plug-in points if your hands are wet.
- Do NOT let children use the power supply unit.
- Do NOT drop, knock, squeeze the unit.
- Do NOT charge, use or store the unit in a bathroom or in an area exposed to rain or moisture.
- Do NOT connect any metallic conductors, such as supply lines, directly to the output receptacle.
- Do NOT dispose of the unit together with household waste.
- Do NOT damage the unit and/or the battery, e.g. by dropping or exposure to impact.
- Only charge, use and store the unit within an ambient temperature of -10 to 50°C.
- Use the output receptacle only for connecting separate electric devices and do not connect to the mains under any circumstances.
- Recharge the unit once every six months when it is not used.
- Check the unit prior to every use.

Warranty

The product is with a warranty of 12 months from the date of purchase.